

ACCESSORIES FOR SKIRTING BOARDS

1	PLASTIC PIN AND SUPPORTS	156
	Pin	156
	Supports	
2	STEEL PIN AND SUPPORTS	157
	Pins	157
	Supports	
3	FLEXY SKIRTING BOARD HOLDER	158
	Skirting board holder	
	- Jrii tii ig boai a Hotaei	




1 PLASTIC PIN AND SUPPORTS

Pin

Plastic pin.

For Ø31 leg	413.032.104	500
For Ø40 leg	413.040.106	300







Supports

Long bracket.

Zinc-plated	414.000.031	250




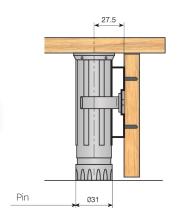


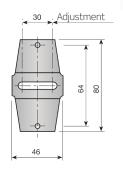

Short bracket.

Zinc-plated	414.100.035	1.000

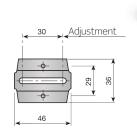

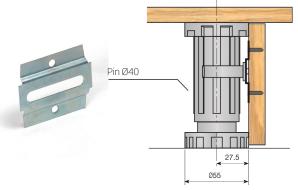




2 STEEL PIN AND SUPPORTS

Pins

Pin for Ø31 leg.

Zinc-plated 413.315.033 1000


For INTEX Ø31 legs.

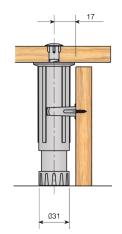

Pin for Ø50 leg.

For mamut-5 Ø50 legs.

Zinc-plated 413.325.032 1000

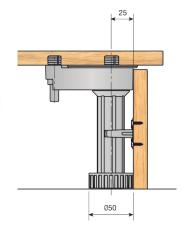


Support

Plate.

Zinc-plated 414.700.031 1.000



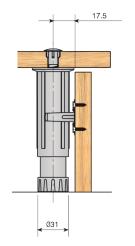





3 FLEXY SKIRTING BOARD HOLDER


This quick mounting holder acts pushing the skirting board downwards. A height tolerance of 16 mm is allowed.

Skirting board holder


FLEXY-1 skirting board holder for 16 mm.

Width		15	
White	RAL 9001	414.516.804	500

It can be placed by manual pressure.

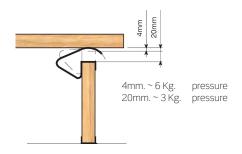






FLEXY-4 knock-in mounting skirting board holder.

Width	15	
Zinc-plated	414.615.036	500

To be nailed with hammer.

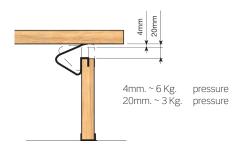






Skirting board holder for 12 ÷ 19 mm. FLEXY-5.

orang board notation for the continue texts of			
Width		20	
White	RAL 9001	415.500.805	500

It can be placed by manual pressure.

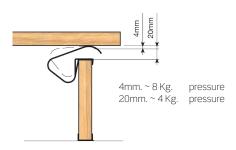






PLATE-RACK

In stainless steel

Plate-rack in stainless steel with glass-rack, and drip tray.

Introducing the new high quality plate -rack in 18.8 Stainless steel to store and drain plates, glasses and other kitchen utensils. As well as assuring long durability, it boasts a practical and useful design. The plate-rack comprises of a drip tray to collect

the excess water, and is able to fit into any module or onto any surface, it does not have to be placed over the sink drainer. Different sizes are available to accommodate any kitchen module. This simple and convenient plate-rack is supplied individually boxed.







Plate-rack + glass-rack + drip tray set.

Module	
400	434.040.106
450	434.045.102
500	434.050.105
600	434.060.104 10
700	434.070.103
800	434.080.102
900	434.090.101


An assembly sheet is included.





■ Technical data

L (mm)	Plate (mm)
224	≤ Ø27.5
265	≤Ø32

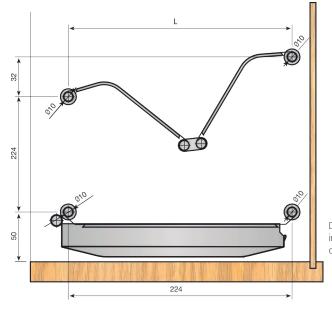

Drilling to be carried out in the module ø 10mm, depth 10mm.

Assembly

Quick and easy to assemble, a template of instructions is included on how it can be fitted. The plate-rack does not need screws and is automatically placed into the pre-drilled holes as you can see in the picture below.



Place the template at the bottom and back of the unit.



Mark with a punch tool as indicated on the template. Various options are available, depending on the desired angle of the plate-rack. Carry out steps 1 and 2 on both sides of the unit.



Drill the 8 holes needed to fit the plate-rack onto the points marked out with the punch tool.



Proceed to fitting the plate-rack. Pressing the locking lugs, these will be retracted and easily fitted in the module drillings.



Lastly the assembly, insert the tray onto the plate-rack support.

